


# HardiePanel® - external corner with MetalTrim

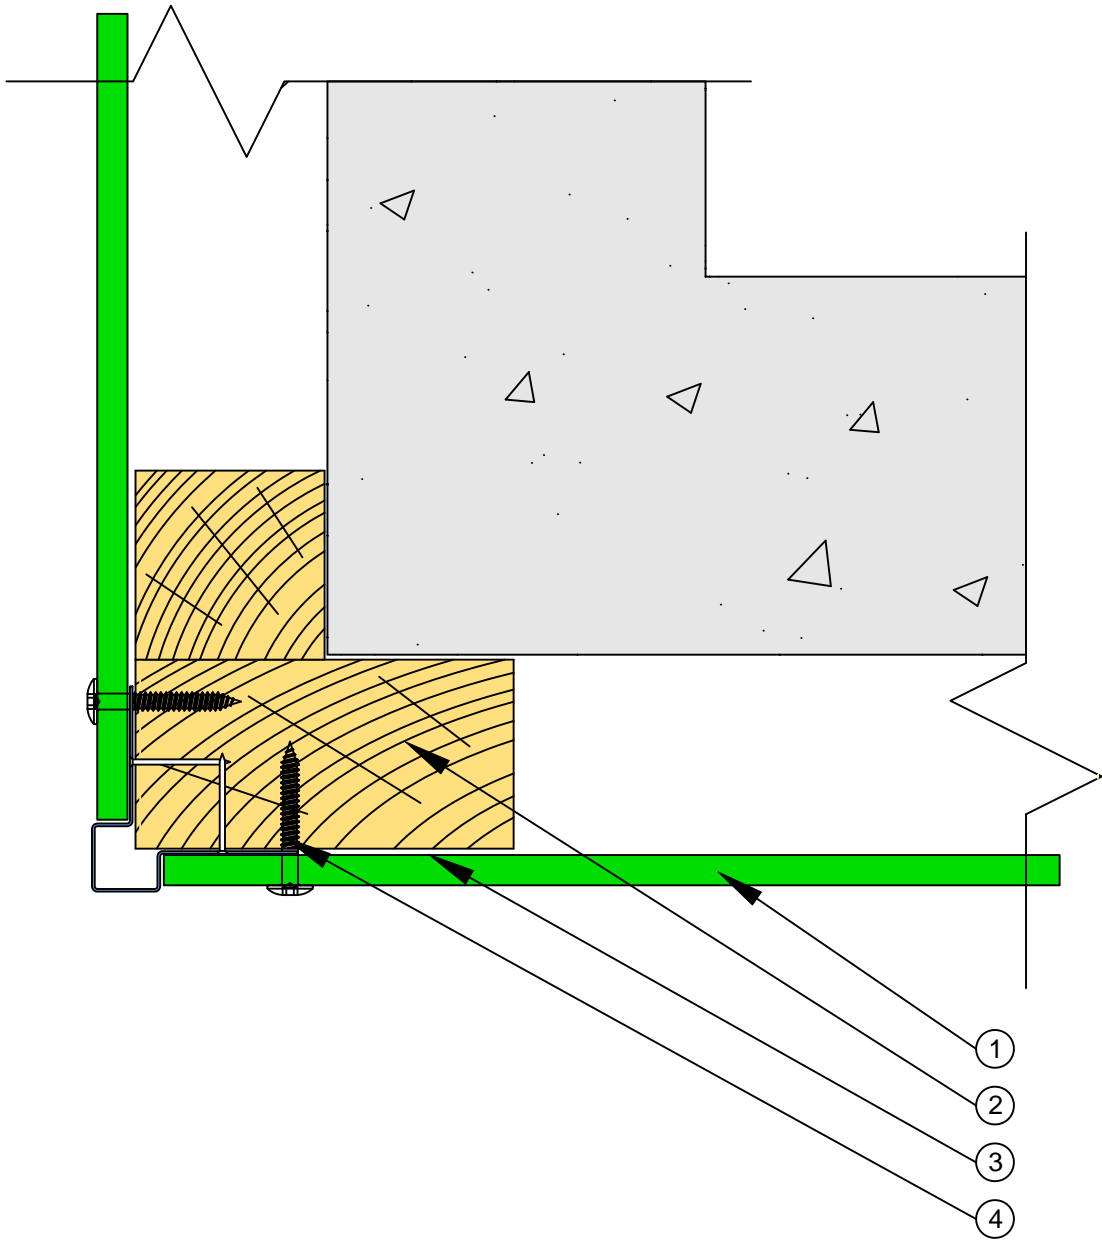

- 1 HardiePanel®
- 2 50mm x 25mm Timber batten
- 3 MetalTrim AE10 profile
- 4 T20 Torx screw